

Pharmacy Refrigeration

Portable Cooler Range

Portable Vaccine Cooler 8L

GDPA code **VCP8UK 8L Portable Cooler**
 SKU code **444410882**




Key features

- ✓ +2°C to +8°C operating temperature range
- ✓ External LED temperature display
- ✓ Holds temperature inside between 2°C & 8°C for up to 17 hours
- ✓ Aluminium heat preserving foil lining
- ✓ Typical vaccine storage 2.5-3L
- ✓ Covered bung non slip feet
- ✓ Comes with 9 Gel Packs

Specification: Portable Vaccine Cooler 8L

Height (mm)	240
Width (mm)	340
Depth (mm)	210
Weight (kg)	1.4
Gross Capacity (L)	8
Net Capacity (L)	2.95
Temperature Range	2 to 8 degrees celsius
Ambient Temperature Range	-10 to +40 degrees celsius
Temperature Hold Range (hours)	Upto 17
Aluminium Lined Sleeve	Yes
Handle Type	Plastic
Additional Shoulder Strap	No
Gel Packs Included	Yes
Number of Gel Packs	9
CE Certified	Yes
External Temperature Display	Yes
Internal Air Temperature Probe	Yes
Battery Included	Yes
Lockable	No

8L Manual Portable Cooler - 25C / 50% rh - 290719

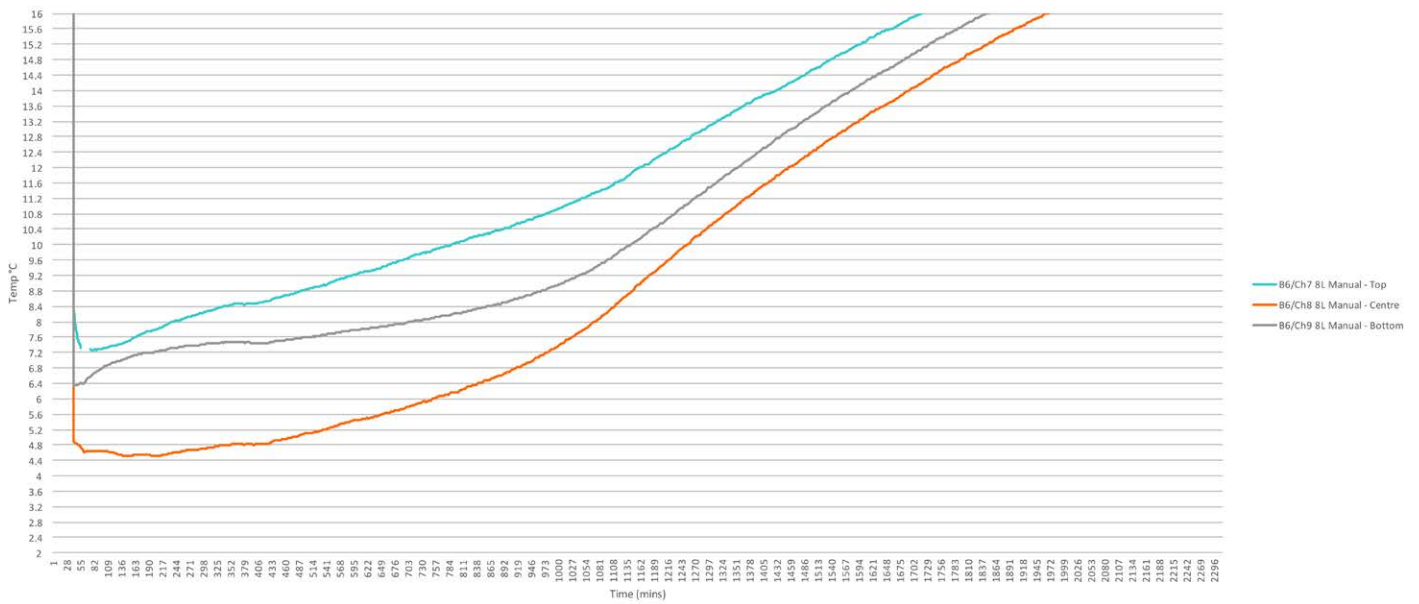

8L manual portable cooler:

Time to reach above 8°C = 17 hrs 51 mins (1073 mins)

Load Set Up

- Ice packs in freezer at -18.9~-19.6°C for 64 hrs
- Gel packs in Ward fridge (1-5C) - display settles at 2.3°C for 42.5 hrs
- Fully loaded with Gel packs